Earth Resistance & Resistivity Tester

Model: 94236





Memory

Features:

- 2 Lines x 16 Characters large LCD.
- 2-wire test, 3-wire test, 4-wire test.
- Auto-ranging microprocessor controlled.
- PC interface connection & operation.
- Optical RS-232 USB to data transmission.
- Earth testing at 20Ω , 200Ω , 2000Ω .
- Earth voltage measuring : 0~300V AC.
- Earth resistivity (p) test.
- Automatic C spike check.
- Automatic P spike check.
- Auto power off.
- Data hold.
- Memory save feature (up to 200 measurements)
- Interval between auxiliary earth spikes is 1.0~50.0m.
- CAT IV 300V
- IEC/EN 61010-1
 IEC/EN 61326-1
 IEC/EN 61557-1
 IEC/EN 61557-5

The BEHATEST Earth 94236 is a handy test and measurement instrument for testing Earth resistance and Soil resistivity. Memory save Available store up to 200 readings, Optical RS-232 to USB data transmission to PC.

The tester has been designed and tested according to EN 61010-1, EN 61326-1, EN 61557-1, EN 61557-5 and other safety standards.

RE: 0~2000Ω

Auto-calculation p: 0.06~628 kΩ.m Memory save: 200 measurements Optical RS-232 to USB data transmission.

Technical Data: Measuring Ranges

	Measuring Ranges	Earth Resistance	: 0~200 / 0~2000 / 0~2000
		Earth Voltage:	0~300.0V/AC
	(ρ= 2 x π x L x R)	Earth Resistivity:	0.06~6.28 kΩ.m
			0.62~62.8 kΩ.m
			6.28~628 kΩ.m
	Accuracy	Earth Resistance: ± (2%rdg+3digits)	
		Earth Voltage: ± (2%rdg+3digits)	
	Resolution	0~20Ω: 0.01Ω	
		0~200Ω: 0.1Ω	
		0~2000Ω: 1Ω	
	Measurment System	Earth resistance by constant current	
		inverter 820Hz approx. 2mA	
	Memory save	200 measurements Operating: 0°C ~50°C / ≤80% R.H.	
	Temperature & Humidty		
		Storage: -10°C ~60°C / ≤80% R.H.	
	Power supply	8 x 1.5 V, IEC LR6 250 x 190 x 110 mm	
	Dimensions		
	Weight	Approx. 1.5kg (ba	attery included)
	Safety Standards	CAT IV 300V	
		IEC/EN 61010-1	
		IEC/EN 61557-1	
		IEC/EN 61557-5	

Earth Resistance: 0~200 / 0~2000 / 0~20000

Scope of Supply:

- 1 pc BEHATEST Earth 94236
- 1 pc Data transmission cable USB to RS-232
- 1 pc Software Compact disk (CD) for PC interface
- 1 set Test leads (red-15m, black-10m, yellow-10m green-5m)
- 1 set Auxiliary earth spike x 4
- 1 pc Instruction manual
- 1 pc Carrying case
- 8 pc Batteries 1.5V, IEC LR6