# Model: 90183



### The functions of Phone Tester:

- Continuity and resistance testing of voltage free objects.
- Check direct and alternating voltages.
- Testing capacitors.
- Testing diodes.
- Testing transistors.
- Power ON/OFF switch for Test-Phone functions.
- The indication of the LED lamp and buzzer sound occur at the same time.
- The LED indication of Power ON status.

Technical Data:

#### Features:

Technical Data:	
Amplifier Probe (90183-A)	Frequency Detection : 1Hz ~ 12kHz
	Receiver Distance Sensitivity Control : < 50 cm
Tone Generator (90183-TFG)	Waveform : Square Wave
	Frequency : 1k Hz +/- 15%
	Over Voltage Protection : 80V DC
	Alternating Tone : Fast and slow
	Connection : RJ11 connector
Phone Tester (190183-TFG)	U test : < 4.75V
	I test : < 2mA
	Resistance : $0 \sim 2 M\Omega$
General	
Operating Temperature & Humidity	0℃ ~ 40℃, 80% Max.
Storage Temperature & Humidity	-℃ ~50℃, 80% Max.
Power supply	Amplifier Probe : 1 x 9V battery.
	Phone Tester / Generator : 6 x 1.5 V, IEC LR6
Dimensions	Amplifier Probe : 270 x 50 x 25 mm
	Phone Tester / Generator : 143 x 74.5 x 33.6 mm
Weight	Amplifier Probe : 125g (battery included)
	Phone Tester/Generator : 250g(battery included)
Safety Standard	EN 6136-1, EN 55011,
	EN 61000-4-2, EN 61000-4-3
	Amplifier Probe (90183-A)   Tone Generator (90183-TFG)   Phone Tester (190183-TFG)   General   Operating Temperature & Humidity   Storage Temperature & Humidity   Power supply   Dimensions   Weight

## Scope of Supply:

1 pc Amplifier Probe (90183-A) 1 pc Phone Tester / Generator (90183-TFG) 1 pc carry case 1 pc Battery 9 V, IEC 6LR61 6 pc Batteries 1.5 V, IEC LR6 1 pc Instruction Manual

# wires.

- Recessed ON/OFF button drain.
- Power supply is in any 9V approximately 100 hours.

#### Phone Tester / Generator

 A tone selector switch local for selection of the fast tone or slow tone.

• Two bi-colored LEDs for Line 1 and Line 2 indication of the polarities of the telephone lines.

• The unit has alligator-type terminals and a modular cable of 4 conductors with a strong Connector.

• The tone and continuity functions are only applied to Line 1. (modular connector)

